


Deployments

In Medulla, there are several types of deployments as well as convergence

In this chapter, we will validate the operation of the various types of deployments:

Checking the Interactive Deployment:

Launch a deployment using the "Deployment" button on a computer's action bar.

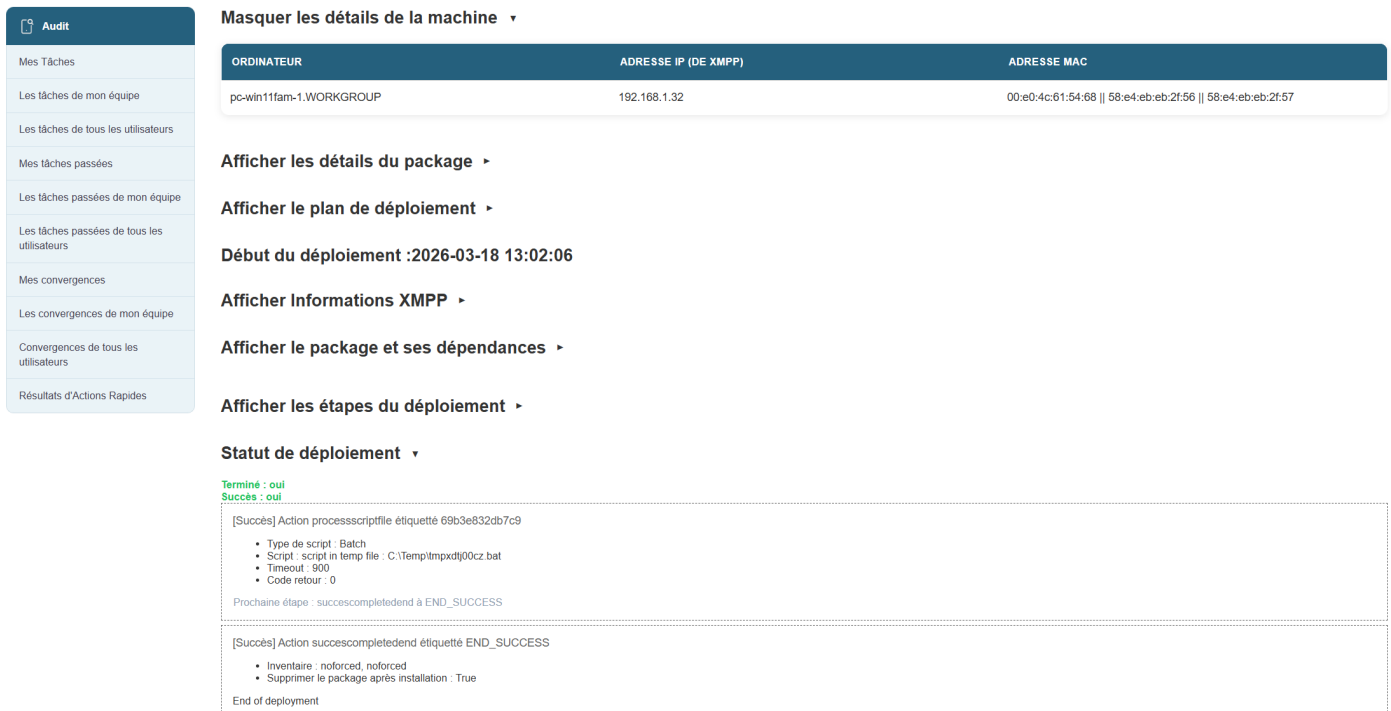

The screenshot displays the Medulla interface for a deployment. On the left is a navigation menu under the 'Audit' header, listing various task categories. The main content area shows deployment details for a computer named 'pc-win11fam-1.WORKGROUP'. A table lists the computer's IP and MAC addresses. Below this, several expandable sections provide details on the package, deployment plan, start time (2026-03-18 13:02:06), XMPP information, package dependencies, and deployment steps. The deployment status is 'Terminé : oui' and 'Succès : oui'. The log shows a successful action for a script, with details on script type, file path, timeout, and return code. The next step is marked as 'succescompletedend à END_SUCCESS'. The final log entry indicates the end of the deployment.

ORDINATEUR	ADRESSE IP (DE XMPP)	ADRESSE MAC
pc-win11fam-1.WORKGROUP	192.168.1.32	00:e0:4c:61:54:68 58:e4:eb:eb:2f:56 58:e4:eb:eb:2f:57

Masquer les détails de la machine ▾

Afficher les détails du package ▸

Afficher le plan de déploiement ▸

Début du déploiement :2026-03-18 13:02:06

Afficher Informations XMPP ▸

Afficher le package et ses dépendances ▸

Afficher les étapes du déploiement ▸

Statut de déploiement ▾

Terminé : oui
Succès : oui

[Succès] Action processscriptfile étiqueté 69b3e832db7c9

- Type de script : Batch
- Script : script in temp file : C:\Temp\lmpxd\j00cz.bat
- Timeout : 900
- Code retour : 0

Prochaine étape : succescompletedend à END_SUCCESS

[Succès] Action succescompletedend étiqueté END_SUCCESS

- Inventaire : noforced, noforced
- Supprimer le package après installation : True

End of deployment

Verify that its status is "Deployment successful."

Checking Scheduled Deployment:

Specify a start and end time for a deployment (later than the current launch time to verify that it launches at the correct time).

- Ordinateurs
- Tous les ordinateurs
- Tous les ordinateurs glpi
- Groupes favoris
- Tous les groupes
- Ajouter un groupe
- Réveil réseau
- Liste des machines non-inventoriées
- Alertes de monitoring
- Action Rapide personnalisée

Contrôle sécurisé du client pc-win11pro-3

Lancer une action

Lancement avancé sur poste : action "7zip (25.01) - 2026/03/18 16:09:07" sur "pc-win11pro-3"

Nom de la commande

7zip (25.01) - 2026/03/18 16:09:07

La commande doit commencer après

2026-03-18 16:09:07

La commande doit s'arrêter avant

2026-03-18 17:09:07

Intervalle de déploiement

Limitation de la bande passante (ko)

<in ko>

Paramètres dynamiques

Redémarrage nécessaire

Arrêt requis

Retarder l'installation

Priorité de la file d'attente

Valider

Annuler

Convergence

Launch a convergence from a group. Verify the machines that received this convergence.

Déploiement [groupe win11pro]

Convergence on vlc -@convergence@-

DATE DE CRÉATION	DATE DE DÉBUT	DATE DE FIN	CRÉATEUR	CONVERGENCE	SYNCHING ACTIVÉ	PROGRESSION
2026-03-18 11:00:37	2026-03-18 13:43:58	2026-03-18 13:43:58	root		Non	Deployment 100% <div style="width: 100%; height: 10px; background-color: #00b09b;"></div>

Déploiement terminé

GRAPHIQUE RÉSUMÉ	SUCCÈS	ERREUR DE TÉLÉCHARGEMENT	ARRÊTÉ
<ul style="list-style-type: none">Deployment Success : 3 (100%)	3	0	0

GRAPHIQUE DÉTAILLÉ	DÉPLOIEMENT RÉUSSI
<ul style="list-style-type: none">Deployment Success : 3 (100%)	3

Détails du paquet

NOM	DESCRIPTION	VERSION	TAILLE	INVENTAIRE ASSOCIÉ
vlc		3.0.21	42.87 Mb	VLC media player / 3.0.21 / VideoLAN

Elements 1 à 3 - Total 3

NOM DE LA MACHINE	PROGRESSION / STATUT	SYSTÈME D'EXPLOITATION	TYPE	DERNIER UTILISATEUR	ENTITÉ	ACTIONS
nbsurfacebook	DEPLOYMENT SUCCESS	Microsoft Windows 11 Profession...	Laptop	guill@nbsurfacebook	Medulla	
pc-win11pro-2	DEPLOYMENT SUCCESS	Microsoft Windows 11 Profession...	Desktop	guill@PC-WIN11PRO-2/medulla...	Medulla	
pc-win11pro-3	DEPLOYMENT SUCCESS	Microsoft Windows 11 Profession...	Desktop	guill@PC-WIN11PRO-3/Medulla...	Medulla	

Delayed Deployment Control:

When launching a deployment, check the "Delay Installation" box and select a specific time. The deployment must start, pause, and resume at the desired time you selected in the "Delay Installation" section when launching the deployment.

Revision #1

Created 2026-04-29 19:23:41 UTC by Adrien Thaissen

Updated 2026-04-29 19:23:41 UTC by Adrien Thaissen